





DMS、CMS Series sensor

Compendium of DMS\CMS Series

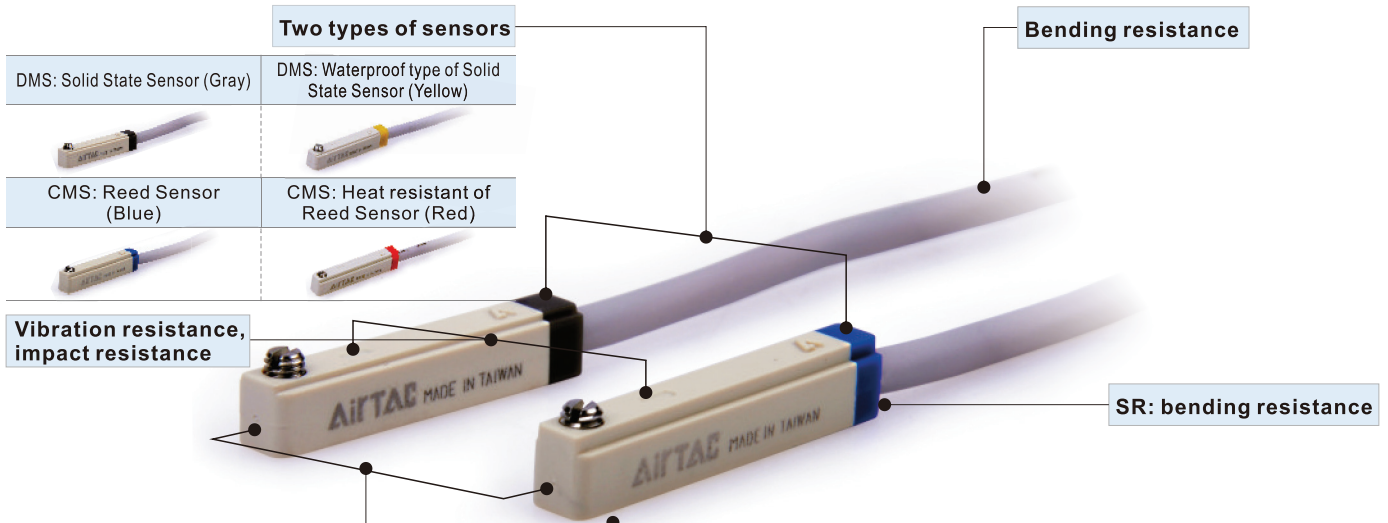


Six types of cross section

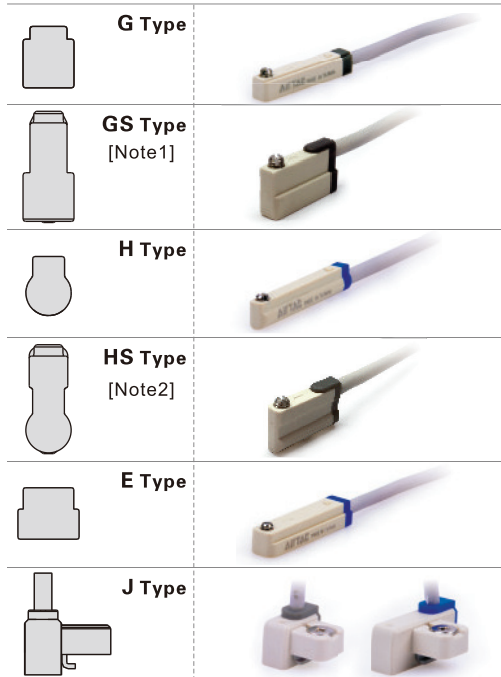

Two kinds of accessories

DMSG/CMSG, Each size of the cylinder has its corresponding accessory.

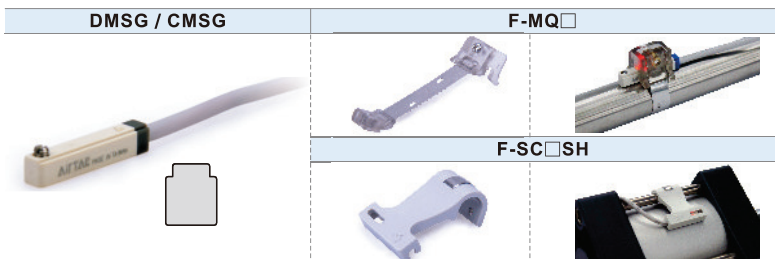

[Note1] GS type is the mini type of G type, and it can be used for short stroke cylinder.

[Note2] HS type is the mini type of H type, and it can be used for short stroke cylinder.

DMS Specifications

Item	DMS		
	2-wire	NPN	PNP
Power supply voltage	10V ~ 28V DC	5V ~ 30V DC	
Switching current	2.5mA ~ 100mA	30V/200mA Max.	
Contact capacity	2.8W Max.	6.0W Max.	
Current consumption	3mA Max.	5mA Max.	
Internal voltage drop	2.7V Max.	0.7V Max.	
Leakage current	0.05mA Max.	0.01mA Max.	
Switching frequency	1000Hz		
Impact resistance	50G		
Circuit protection	Reverse polarity protection Surge protection		
Operating Temp.	-10°C ~ 70°C		
Enclosure	IP64/IP68		
Standard	CE marking, RoHS		

CMS Specifications

Item	CMS	
	General	Heat resistant
Power supply voltage	5V ~ 240V AC/DC	
Switching current	100mA	
Contact capacity	10W Max.	
Current consumption	N/A	
Internal voltage drop	2.5V Max. @100mA DC	N/A
Leakage current	N/A	
Switching frequency	200Hz	
Impact resistance	50G	
Circuit protection	N/A	
Operating Temp.	-10°C ~ 70°C	-10°C ~ 125°C
Enclosure	IP64	
Standard	CE marking, RoHS	




DMS, CMS Series

Ordering code for DMS

DMS G - □ 020 - □

① ② ③ ④ ⑤

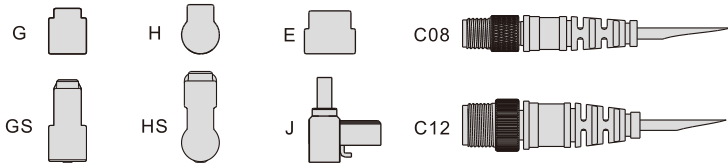


① Model	DMS: Solid State Sensor					
② Specifications	G	GS	H	HS	E	J
③ Output type	Blank: 2 wire			N: NPN		P: PNP
④ Lead wire length	020: 2m		030: 3m	050: 5m		100: 10m
⑤ Additional specification	C08: 150mm with M8 plug connector			C12: 150mm with M12 plug connector		
	Blank: General type			W: Waterproof type IP68 [note1]		

[Note 1] There is no waterproof type for C08 / C12 & J/GS/HS.
The sockets of C08 and C12 need additional order. Please check on page 528.

Ordering code for CMS

CMS G - 020 - □

① ② ③ ④

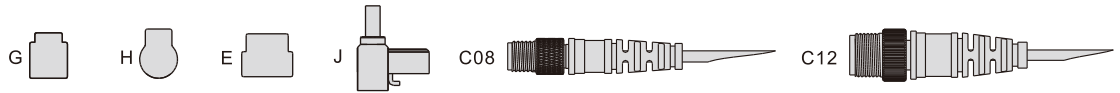

① Model	CMS: Reed Sensor					
② Specifications	G	H	E	J		
③ Lead wire length	020: 2m		030: 3m	050: 5m		100: 10m
④ Additional specification	C08: 150mm with M8 plug connector			C12: 150mm with M12 plug connector		
	Blank: General type			H: Heat resistant [note2]		

[Note 2] There is no heat resistant type for C08 & C12.
The sockets of C08 and C12 need additional order. Please check on page 528.

Ordering code for accessories

F - MQ □

Cylinder Accessory

① ② ③



① Category	F: Accessory					
② Model	MQ: Cylinder Accessory					
③ Cylinder	Aluminum alloy			Stainless steel		
	Code	For series	For bore size	Code	For series	For bore size
	A20: Φ20mm	MCK	Φ20	S06: Φ6mm	PB/PBR MI MF MG	Φ6
	A25: Φ25mm		Φ25	S08: Φ8mm		Φ8
	A32: Φ32mm		Φ32	S10: Φ10mm		Φ10
	A40: Φ40mm	MBL	Φ40	S12: Φ12mm		Φ12
	A50: Φ50mm		Φ50	S16: Φ16mm		Φ16
	A63: Φ63mm	Φ63	S20: Φ20mm	Φ20		
	A80: Φ80mm	Φ80	S25: Φ25mm	Φ25		
				S32: Φ32mm	Φ32	
			S40: Φ40mm	Φ40		
			S50: Φ50mm	Φ50		
			S63: Φ63mm	Φ63		

F - SC □ SH

Tie Rod Cylinder Accessory


① ② ③ ④



① Category	F: Accessory		
② Model	SC: Tie Rod Cylinder Accessory		
③ Cylinder	Code	For series	For bore size
	32	SGC	Φ32, Φ40, Φ50
	63		Φ63
	80		Φ80, Φ100
	125		Φ125
	160		Φ160, Φ200
250	Φ250		
④ Attached			


Dimensions

G Type

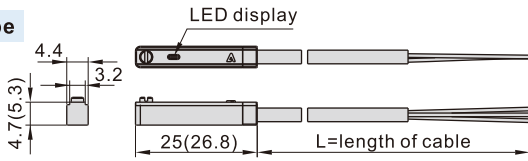


Note: a number in the bracket is the dimension of CMSG.

E Type

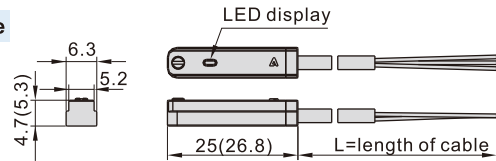


Note: a number in the bracket is the dimension of CMSE.


GS Type

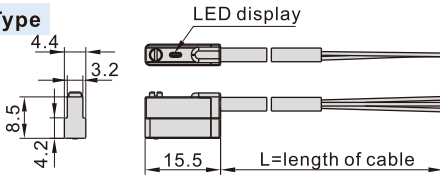

J Type

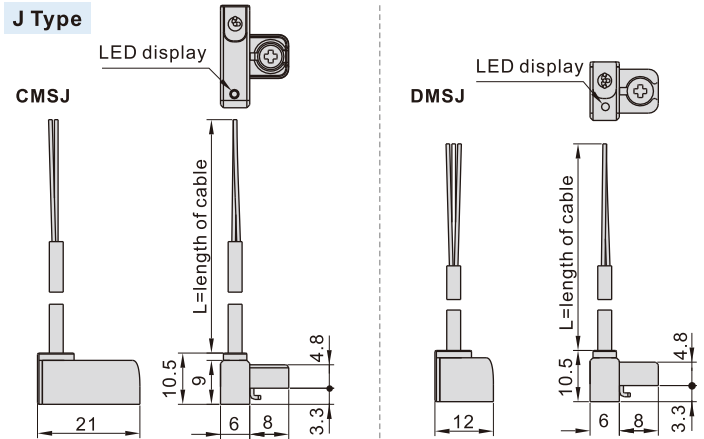


H Type

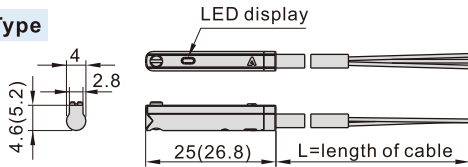

Note: a number in the bracket is the dimension of CMSH.

HS Type

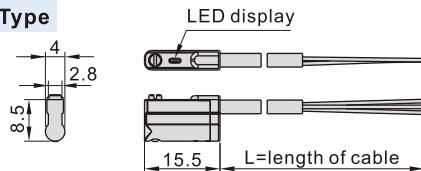


length of cable specification	length of cable(L)
020 Type	2000mm
030 Type	3000mm
050 Type	5000mm


Connection method

2 wire, reed sensor connection


1.General connection

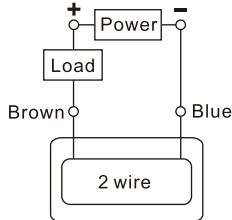

2.Series connection(And)

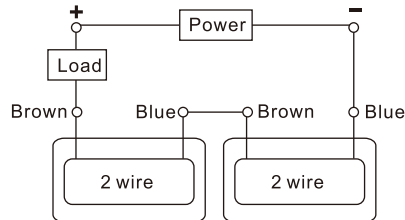


3.Parallel connection(OR)

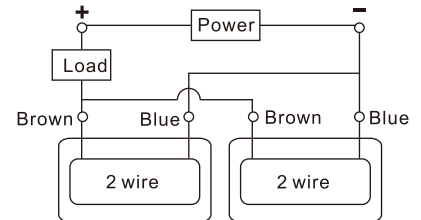


3 wire, solid state NPN connection

1.General connection

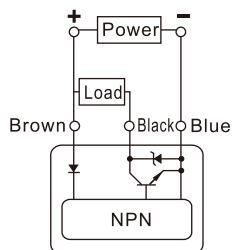


Note: The indicator lights will light up when both auto switches are turned NO.

2.Series connection(And)

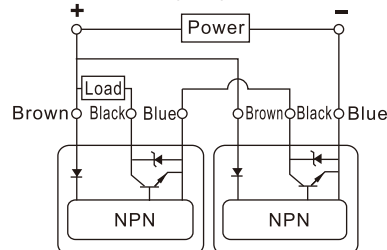


3.Parallel connection(OR)

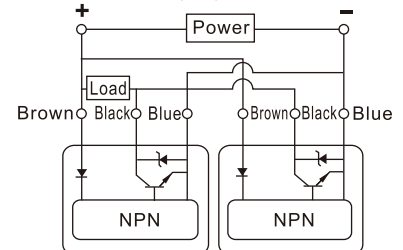


3 wire, solid state PNP connection

1.General connection

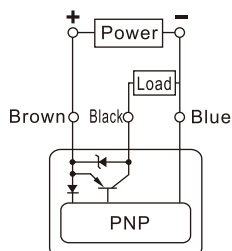


Note: The indicator lights will light up when both auto switches are turned NO.

2.Series connection(And)

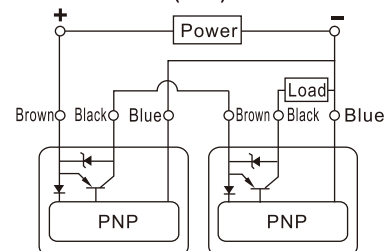

3.Parallel connection(OR)

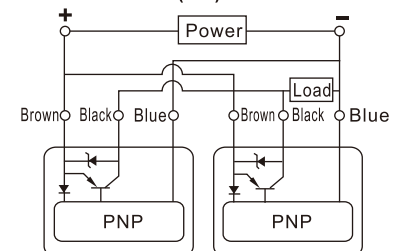

The selection of sensor

DMSG(S)	CMSG	HFKL		HFKP								ACQ/TACQ										QCK											
		10	16	20	25	10	16	20	25	32	40	12	16	20	25	32	40	50	63	80	100	125	140	160	12	16	20	25	32	40	50	63	
		●	●	●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
		HFK				TCL/TCM								HFZ					HFY														
		10	16	20	25	32	40	6	10	12	16	20	25	32	40	50	63	80	100	6	10	16	20	25	32	40	6	10	16	20	25	32	
		●	●	●	●	●			●	●	●	●	●	●	●	●	●	●			●	●	●	●	●			●	●	●	●	●	
		TR				HFP				MD/MK																							
		6	10	16	20	25	32	10	16	20	25	32	6	10	16	20	25	32															
		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●															

	Stainless steel																							
	PB/PBR					MI								MF				MG						
		6	8	10	12	16	8	10	12	16	20	25	32	40	20	25	32	40	20	25	32	40	50	63
		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	Aluminum alloy																							
	MBL					MCK					It needs an accessory to mount a sense on a cylinder													
	20	25	32	40	50	63	25	32	40	50											63	80		
	●	●	●	●	●	●	●	●	●	●	●	●												

	SGC				It needs an accessory to mount a sense on a cylinder										
		125	160	200											250
		●	●	●											●

DMSJ	CMSJ	ACQ/TACQ					QCK				QDK				
		32	40	50	63	80	100	32	40	50	63	20	25	32	40
		●	●	●	●	●	●	●	●	●	●	●	●	●	●

DMSH(S)	CMSH	ACQ/TACQ			TC		HFZ						HFY		HFP		HFR					HFC					HFT						
		125	140	160	6	10	6	10	16	20	25	32	40	6	32	10	16	20	25	32	16	20	25	32	40	50	63	10	16	20	25	32	
		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
		QDK				HLQ/HLQL				HLS/HLSL				MU					HLH			MPG											
		20	25	32	40	6	8	12	16	20	25	6	8	12	16	20	25	6	8	10	12	16	20	6	10	16	20	6	8	10	12	16	
		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
		HRQ					HFK					HLF			HGS			RMH			HFD												
	2	3	7	10	20	30	50	70	100	200	10	16	20	25	32	40	8	12	16	20	6	8	10	12	10	16	20	25	8	12	16	20	25
	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	HFKL				HFKP				HFCQ																								
	10	16	20	25	10	16	20	25	32	40	16	20	25	32	40	50	63																
	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●																

DMSE	CMSE	SE/BSE						SAI								ACE												
		32	40	50	63	80	100	125	32	40	50	63	80	100	125	160	200	12	16	20	25	32	40	50	63	80	100	125
		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

Replacement

New		Previous	
DMSG / DMSG(S) / CMSG		DS1-G / CS1-G	
Ordering code	DMSG(S)-020	DS1G020	
	DMSG(S)-030	DS1G030	
	DMSG(S)-050	DS1G050	
	DMSG(S)-C08	DS1GC08	
	DMSG(S)-C12	DS1GC12	
	DMSG(S)-020-W	-	
	DMSG(S)-030-W	-	
	DMSG(S)-050-W	-	
	DMSG(S)-N020(-W)	DS1GN020(No Waterproof type)	
	DMSG(S)-N030(-W)	DS1GN030(No Waterproof type)	
	DMSG(S)-N050(-W)	DS1GN050(No Waterproof type)	
	DMSG(S)-NC08	DS1GNC08	
	DMSG(S)-NC12	DS1GNC12	
	DMSG(S)-P020(-W)	DS1GP020(No Waterproof type)	
	DMSG(S)-P030(-W)	DS1GP030(No Waterproof type)	
	DMSG(S)-P050(-W)	DS1GP050(No Waterproof type)	
	DMSG(S)-PC08	DS1GPC08	
	DMSG(S)-PC12	DS1GPC12	
	CMSG-020	CS1G020	
	CMSG-030	CS1G030	
	CMSG-050	CS1G050	
	CMSG-C08	CS1GC08	
	CMSG-C12	CS1GC12	
	CMSG-020-H	CS1G020HT	
	CMSG-030-H	CS1G030HT	
	CMSG-050-H	CS1G050HT	
	-	CS1GC08HT	
	-	CS1GC12HT	

New		Previous	
DMSJ / CMSJ		DS1-J / CS1-J	
Ordering code	DMSJ-020	DS1J020	
	DMSJ-030	DS1J030	
	DMSJ-050	DS1J050	
	DMSJ-C08	DS1JC08	
	DMSJ-C12	DS1JC12	
	DMSJ-020-W	-	
	DMSJ-030-W	-	
	DMSJ-050-W	-	
	DMSJ-N020(-W)	DS1JN020(No Waterproof type)	
	DMSJ-N030(-W)	DS1JN030(No Waterproof type)	
	DMSJ-N050(-W)	DS1JN050(No Waterproof type)	
	DMSJ-NC08	DS1JNC08	
	DMSJ-NC12	DS1JNC12	
	DMSJ-P020(-W)	DS1JP020(No Waterproof type)	
	DMSJ-P030(-W)	DS1JP030(No Waterproof type)	
	DMSJ-P050(-W)	DS1JP050(No Waterproof type)	
	DMSJ-PC08	DS1JPC08	
	DMSJ-PC12	DS1JPC12	
	CMSJ-020	CS1J020	
	CMSJ-030	CS1J030	
	CMSJ-050	CS1J050	
	CMSJ-C08	CS1JC08	
	CMSJ-C12	CS1JC12	
	CMSJ-020-H	CS1J020HT	
	CMSJ-030-H	CS1J030HT	
	CMSJ-050-H	CS1J050HT	
	-	CS1JC08HT	
	-	CS1JC12HT	

New		Previous	
DMSE / CMSE		DS1-E / CS1-E	
Ordering code	DMSE-020	DS1E020	
	DMSE-030	DS1E030	
	DMSE-050	DS1E050	
	DMSE-C08	DS1EC08	
	DMSE-C12	DS1EC12	
	DMSE-020-W	-	
	DMSE-030-W	-	
	DMSE-050-W	-	
	DMSE-N020(-W)	DS1EN020(No Waterproof type)	
	DMSE-N030(-W)	DS1EN030(No Waterproof type)	
	DMSE-N050(-W)	DS1EN050(No Waterproof type)	
	DMSE-NC08	DS1ENC08	
	DMSE-NC12	DS1ENC12	
	DMSE-P020(-W)	DS1EP020(No Waterproof type)	
	DMSE-P030(-W)	DS1EP030(No Waterproof type)	
	DMSE-P050(-W)	DS1EP050(No Waterproof type)	
	DMSE-PC08	DS1EPC08	
	DMSE-PC12	DS1EPC12	
	CMSE-020	CS1E020	
	CMSE-030	CS1E030	
	CMSE-050	CS1E050	
	CMSE-C08	CS1EC08	
	CMSE-C12	CS1EC12	
	CMSE-020-H	CS1E020HT	
	CMSE-030-H	CS1E030HT	
	CMSE-050-H	CS1E050HT	
	-	CS1EC08HT	
	-	CS1EC12HT	






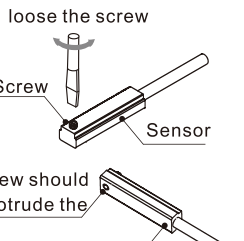
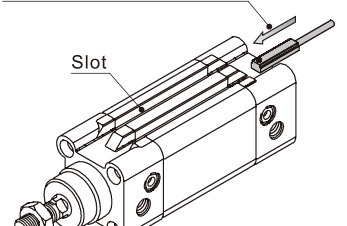
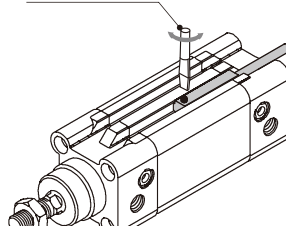
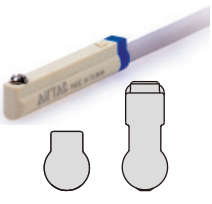
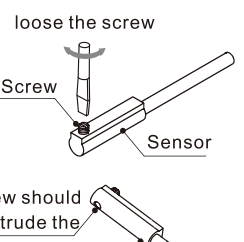
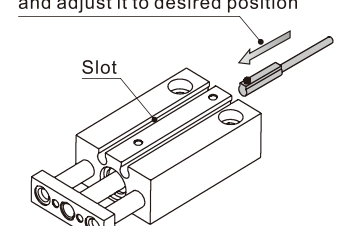
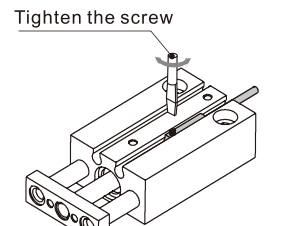
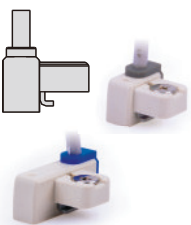
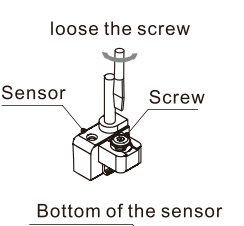
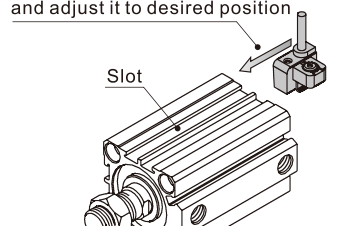
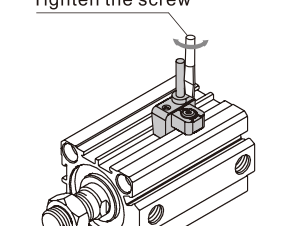
New		Previous	
DMSH / DMSHS / CMSH		DS1-H / CS1-H	
Ordering code	DMSH(S)-020	DS1H020	
	DMSH(S)-030	DS1H030	
	DMSH(S)-050	DS1H050	
	DMSH(S)-C08	DS1HC08	
	DMSH(S)-C12	DS1HC12	
	DMSH(S)-020-W	-	
	DMSH(S)-030-W	-	
	DMSH(S)-050-W	-	
	DMSH(S)-N020(-W)	DS1HN020(No Waterproof type)	
	DMSH(S)-N030(-W)	DS1HN030(No Waterproof type)	
	DMSH(S)-N050(-W)	DS1HN050(No Waterproof type)	
	DMSH(S)-NC08	DS1HNC08	
	DMSH(S)-NC12	DS1HNC12	
	DMSH(S)-P020(-W)	DS1HP020(No Waterproof type)	
	DMSH(S)-P030(-W)	DS1HP030(No Waterproof type)	
	DMSH(S)-P050(-W)	DS1HP050(No Waterproof type)	
	DMSH(S)-PC08	DS1HPC08	
	DMSH(S)-PC12	DS1HPC12	
	CMSH-020	CS1H020	
	CMSH-030	CS1H030	
	CMSH-050	CS1H050	
	CMSH-C08	CS1HC08	
	CMSH-C12	CS1HC12	
	CMSH-020-H	CS1H020HT	
	CMSH-030-H	CS1H030HT	
	CMSH-050-H	CS1H050HT	
	-	CS1HC08HT	
	-	CS1HC12HT	

Replacement of previous sensor

New sensor + Tie Rod Cylinder Accessory		Previous sensor + Accessory				
DMSG/CMSG	F-SC□SH	previous sensor		previous sensor + Accessory		
		DS1-A / CS1-A		DS1-F / CS1-F	DS1-U / CS1-U	
Example						
	Ordering code	Ordering code	Ordering code	Ordering code	Ordering code	Ordering code
	DMSG + CMSG +	F-SC32SH	DS1A CS1A	DS1F CS1F	DS1U CS1U	F-SC32H
		F-SC63SH				F-SC63H
		F-SC80SH				F-SC80H
F-SC125SH		-				
F-SC160SH	-					
F-SC250SH	-					

new sensor + band		previous sensor + band							
DMSG/CMSG	F-MQ□	previous sensor		previous sensor + band					
		DS1-M / CS1-M	DS1-T / CS1-T	DS1-F / CS1-F	DS1-U / CS1-U	GXPAB-01			
Example									
	Ordering code	Ordering code	Ordering code	Ordering code	Ordering code	Ordering code			
	DMSG + CMSG +	F-MQA20	D(C)S1M□A20	-	DS1F CS1F	DS1U CS1U	-		
		F-MQA25	D(C)S1M□A25				GXPAB-01		
		F-MQA32	D(C)S1M□A32				-		
F-MQA40		D(C)S1M□A40	D(C)S1T□A32						
F-MQA50		D(C)S1M□A50	D(C)S1T□A40						
F-MQA63		D(C)S1M□A63	D(C)S1T□A50						
F-MQA80		-	-				-	-	
F-MQ32T		-							GXPAB-01
F-MQ40T		-							-
F-MQ50T		-							-
F-MQS06		D(C)S1M□S06							-
F-MQS08		D(C)S1M□S08							-
F-MQS10		D(C)S1M□S10							-
F-MQS12		D(C)S1M□S12							-
F-MQS16		D(C)S1M□S16							-
F-MQS20		D(C)S1M□S20							-
F-MQS25		D(C)S1M□S25							-
F-MQS32		D(C)S1M□S32							-
F-MQS40		D(C)S1M□S40							-
F-MQS50	D(C)S1M□S50	-							
F-MQS63	D(C)S1M□S63	-							

Installation

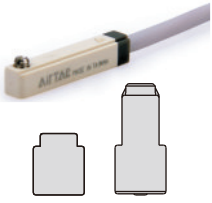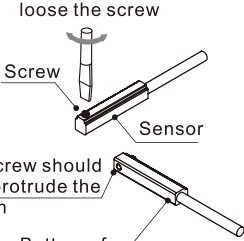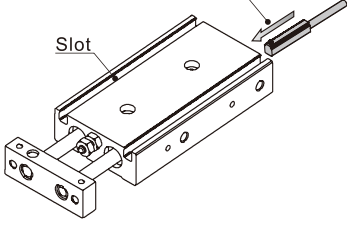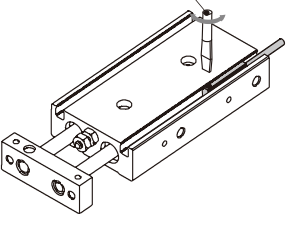Sensor model	Procedure		
<p data-bbox="113 349 272 371">DMSG(S)/CMSG</p> 	<p data-bbox="347 349 363 371">1</p>  <p data-bbox="459 405 603 427">loose the screw</p> <p data-bbox="443 461 496 483">Screw</p> <p data-bbox="584 528 647 551">Sensor</p> <p data-bbox="384 562 687 622">The screw should NOT protrude the bottom</p> <p data-bbox="459 640 552 685">Bottom of the sensor</p>	<p data-bbox="742 349 758 371">2</p> <p data-bbox="742 405 1023 450">Insert the sensor into the slot and adjust it to desired position</p>  <p data-bbox="815 483 863 506">Slot</p>	<p data-bbox="1136 349 1152 371">3</p> <p data-bbox="1222 416 1382 439">Tighten the screw</p> 
<p data-bbox="129 730 256 752">DMSE/CMSE</p> 	<p data-bbox="347 730 363 752">1</p>  <p data-bbox="459 786 603 808">loose the screw</p> <p data-bbox="443 842 496 864">Screw</p> <p data-bbox="584 909 647 931">Sensor</p> <p data-bbox="384 943 687 1003">The screw should NOT protrude the bottom</p> <p data-bbox="459 1021 552 1066">Bottom of the sensor</p>	<p data-bbox="742 730 758 752">2</p> <p data-bbox="742 786 1023 831">Insert the sensor into the slot and adjust it to desired position</p>  <p data-bbox="815 864 863 887">Slot</p>	<p data-bbox="1136 730 1152 752">3</p> <p data-bbox="1222 797 1382 819">Tighten the screw</p> 
<p data-bbox="113 1142 268 1164">DMSH(S)/CMSH</p> 	<p data-bbox="347 1142 363 1164">1</p>  <p data-bbox="459 1189 603 1211">loose the screw</p> <p data-bbox="443 1245 496 1267">Screw</p> <p data-bbox="584 1312 647 1335">Sensor</p> <p data-bbox="384 1346 687 1406">The screw should NOT protrude the bottom</p> <p data-bbox="459 1424 552 1469">Bottom of the sensor</p>	<p data-bbox="742 1142 758 1164">2</p> <p data-bbox="742 1189 1023 1234">Insert the sensor into the slot and adjust it to desired position</p>  <p data-bbox="815 1267 863 1290">Slot</p>	<p data-bbox="1136 1142 1152 1164">3</p> <p data-bbox="1222 1223 1382 1245">Tighten the screw</p> 
<p data-bbox="129 1554 256 1576">DMSJ/CMSJ</p> 	<p data-bbox="347 1554 363 1576">1</p>  <p data-bbox="488 1603 632 1626">loose the screw</p> <p data-bbox="443 1659 496 1682">Sensor</p> <p data-bbox="584 1659 647 1682">Screw</p> <p data-bbox="472 1783 663 1827">Bottom of the sensor</p> <p data-bbox="347 1850 687 1910">Adjust the metal part till the lateral shape can fit the slot of the cylinder</p>	<p data-bbox="742 1554 758 1576">2</p> <p data-bbox="742 1603 1023 1648">Insert the sensor into the slot and adjust it to desired position</p>  <p data-bbox="815 1682 863 1704">Slot</p>	<p data-bbox="1136 1554 1152 1576">3</p> <p data-bbox="1222 1621 1382 1644">Tighten the screw</p> 

Sensor

DMSG, CMS Series

Sensor model	Procedure			
DMSG+(F-SC□SH) CMSG+(F-SC□SH) 	1		2	
	3		4	
	1		2	
	3		4	

Sensor for "米" shape cylinder

SAI, SAU series will substitute for SI, SU series. And the corresponding sensors have some adjustments as the chart below.

New type(SAI)		Previous type(SI)	
Cylinder and accessory	<p>Cylinder</p> <p>Sensor</p> <p>CMSE \ DMSE</p>	Cylinder and accessory	<p>Cylinder</p> <p>Sensor</p> <p>CS1B1 / DS1B1 CS1B2 / DS1B2 CS1B3 / DS1B3 CS1B4 / DS1B4 CS1B5 / DS1B5 CS1B6 / DS1B6 CS1B7 / DS1B7</p> <p>CS1F/DS1F/CS1U/DS1U + F-SI32H/F-SI40H F-SI50H/F-SI63H F-SI80H/F-SI100H F-SI125H/F-SI160H F-SI200H</p>
Installation		Installation	<p>Sensor (CS1F/DS1F/CS1U/DS1U) Mounting bracket (F-SI32H~F-SI200H) "米" shape cylinder (SI series) Sensor (CS1B1~B7/DS1B1~B7)</p>
New type(SAU)		Previous type(SU)	
Cylinder and accessory	<p>Cylinder</p> <p>Sensor</p> <p>CMMSG \ DMSG</p>	Cylinder and accessory	<p>Cylinder</p> <p>Sensor</p> <p>CS1B1 / DS1B1 CS1B2 / DS1B2 CS1B3 / DS1B3 CS1B4 / DS1B4</p> <p>CS1F/DS1F/CS1U/DS1U + F-SU32H/F-SU40H F-SU50H/F-SU63H F-SU80H/F-SU100H</p>
Installation		Installation	<p>Sensor (CS1F/DS1F/CS1U/DS1U) Mounting bracket (F-SU32H~F-SU100H) "米" shape cylinder (SU series) Sensor (CS1B1~B4/DS1B1~B4)</p>

Socket

Ordering code

F - DMS C08 2 020




① ② ③ ④ ⑤






① Category code	F: Accessory			
② Specification code	DMS: Digital Magnetic Sensor			
③ Socket type	C08:M8 socket	C12:M12 socket		
④ Wire type	2: 2-wire type	3: 3-wire type		
⑤ Wire length	020: 2 meters	030: 3 meters	050: 5 meters	100: 10 meters

Appearance

M8 socket

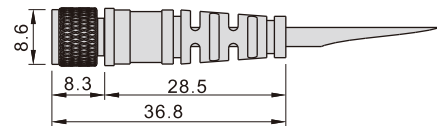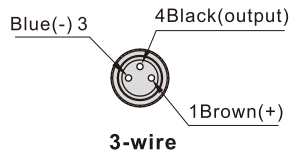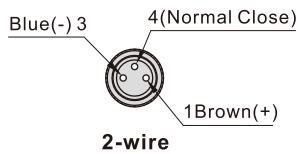

M12 socket

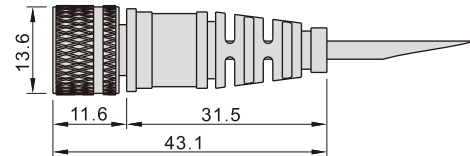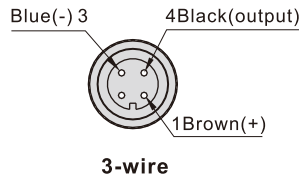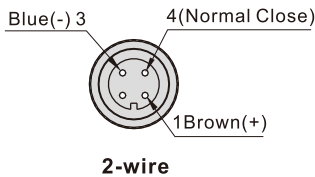

Instruction

1. Sensor shall not fall down or bear great impact when it is installed.
2. The wire of the Sensor shall not move with the action of cylinder.
3. Clamping torque shall be within the allowable scope when the Sensor is installed(0.15~0.2Nm).
4. Sensor shall be installed in the middle position of the action scope.
5. Sensor wiring:
 - A. The wire is unable to bear repetitive torsion and tension. Please wire an external load before switch the power on.
 - B. No poor insulation in wire.
 - C. Do not wire with power line, high voltage line or use one wiring pipe.
 - D. Pleas wire the circuit correctly base on the circuit diagram.
6. Execute scheduled maintenance by the following guidelines:
 - A. Make sure the sensor is firmly fixed.
 - B. Make sure the wire is intact.
 - C. Make sure that LED indicate the movement of cylinder correctly.
7. Application of environment:
 - A. It is Not allow to use the sensor in the environment with explosive gas.
 - B. Magnetic sensor shall not be used in the environment with external magnetism.
 - C. Magnetic sensor shall not be used in the environment that is always eroded by water.
 - D. Magnetic sensor shall not be used in the environment with oil moisture or chemical substance.
 - E. Magnetic sensor shall not be used in the environment with periodically changing temperature.
 - F. Magnetic sensor shall not be used in the environment with excessively great impact.
 - G. Magnetic sensor shall not be used in the environment with sources of electrical pulse.
 - H. Avoid the environment with accumulated iron power and dense magnetic objects.